THE SAFETY OF CHIPOLINO PRODUCTS AND THE MATERIALS USED FOR THEIR PRODUCTION IS GUARANTEED AND CERTIFIED IN TEST LABORATORIES ACCORDING TO EN STANDARDS.

INSTRUCTION MANUAL FOR USE OF BABY STROLLER “POOKY PRO”

POOKY PRO

PLEASE READ CAREFULLY THIS INSTRUCTION MANUAL AND KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE! IT CONTAINS IMPORTANT INFORMATION, INSTRUCTIONS AND RECOMMENDATIONS FOR THE STROLLER AND ITS SAFE USAGE

This stroller is suitable for one child from 0 to 36 months, with weight not more than 15 kg.

The stroller has a 5-point harness, which keeps your child safe. The backrest of the seat and the canopy can be adjusted. The seat transforms into carry cot with two possible positions, where the child can be either face-to face to the mother or forward facing.

A car seat 0+ and weight up to 13kg is safe to use and compatible with the stroller. The car seat model Pooky can be bought separately, if not included in the stroller set.

This stroller has been manufactured in accordance with the Product Safety Directive 2001/95/EU of the European Parliament and The Council and with European standard EN 1888 "Child care articles. Wheeled child conveyances. Safety requirements and test methods" and the regulations of national legislation including the consumer protection law.

ATTENTION! Your child will be protected to maximum extent only if you follow the guidelines and recommendations in this instruction manual! Pay special attention to the warnings and secure all necessary safety precautions in order to prevent the risk of injury or impairment and guarantee your child's safety! You are solely responsible for the safety of your child, if you don't follow exactly the instructions and safety recommendations in this manual! Make sure that everybody who uses this stroller has read and understood this manual!

SAFETY REQUIREMENTS AND WARNINGS!

ATTENTION! Failure to follow these warnings and instructions for assembly, use and maintenance can lead to serious injury or impairment of the child!

1. Never leave your child unattended!
2. Using the stroller for a child weighing more than 15 kg will cause overloading, tension and instability, and may make the construction unstable, and bring the stroller to tip-over and injure your child seriously!
3. This stroller is intended for use for one child at a time! It is dangerous to carry two or more children at a time in the stroller!
4. Use the sitting position after your child turns 6 months of age!
5. Do not use the cot for a child, which can stay sitting unattended and when it starts pushing itself up with hands and knees!
6. The maximum load for the storage basket is 3kg. The baggage carried must be evenly distributed in the basket. Do not overload the storage basket! Do not use storage basket as a child carrier!
7. Always attach the canopy to the backrest of the seat to prevent your baby from accidentally slipping off or injury.
8. To avoid serious injury from falling or sliding out, always use the safety harnesses. Always use the belts when your child is able to stay sitting unattended and when it starts lifting itself up with hands and knees. Adjust the harnesses to snug fit around your child, so they will not change their length and not be twisted. Periodically check if they are firmly attached to the stroller construction and if they lock safely! The harnesses must not be worn out or torn; the plastic buckles must be undamaged and provide safe joining.
9. Initial assembly, folding and unfolding to be done only by an adult!
10. Before each use check the good working order of the stroller and the stability of the assembly of the parts (seat unit, canopy, footrest, backrest, bumper and handle) in the desired position! Discontinue usage if you find worn out or loose joints, damaged or missing parts! There is big risk of injury of the child!

11. Before each use check the good working order of the brakes. Always engage the brakes when the stroller has stopped and is not moving, especially on sloped surfaces and when placing or taking your child out of it!

12. Make sure the stroller is fully unfolded and all locking mechanisms are engaged before placing the child in the stroller in order to prevent sudden folding of the stroller.

13. When the child is sitting, its head must be below the upper end of the backrest.

14. Fold and unfold carefully in order to avoid finger entrapment! Make sure the child is in safe distance away from the stroller when you make adjustments, when you fold or unfold the stroller.

15. Never lift, fold, adjust or repair the stroller while the child is in it!

16. Keep the child away from any separable or moving parts.

17. Do not adjust the backrest while the child is in the stroller! The position of the backrest of the seat should be adjusted only by adult.

18. Do not leave bags or other items in the stroller with the child or on the canopy! Every load attached to the handle, bumper, and backrest or on the side of the stroller will affect its stability. Do not overload the stroller! If you do, it may tip over and injure the child.

19. Do not place items with long strings around your child's neck and do not attach additional strings to toys to avoid strangulation!

20. Do not place an additional mattress at the most reclined position of the backrest of the stroller!

21. Extra pads or pillows placed on the seat will impede the proper use of the safety harnesses and will reduce the safety and stability of the child in the stroller!

22. Always keep the front bumper locked while the child is in the stroller! Do not lift the stroller by the front bumper, it is dangerous for the child!

23. Do not let your child stand in the stroller, climb or hang on it!

24. Do not allow your child to play with the stroller! It is dangerous to let children or animals play or run close to or beneath the stroller!

25. The stroller should be used only at a walking speed! Do not use while jogging, skating, running or performing other sport activity!

26. Never use stroller on stairs or escalators! You may suddenly lose control of the stroller or your child may fall and injure itself! Take extra care when going up or down a pavement or step!

27. Do not use near pools, hot surfaces or other hazardous areas!

28. Do not make any changes or modifications to the stroller's construction, because they may endanger your child’s safety! Only use spare parts or other components, which are recommended or supplied by the producer! In the contrary case the producer is not responsible for the product’s safety. In case of problems contact the dealer or an authorized repair service for advice and/or repair!

29. When the stroller is folded, keep it in a safe place away from children! Otherwise the child can push the stroller down and hurt itself.

30. The plastic packaging of the product must be kept out of the reach of babies and children at the time of and after unpacking. In this way you will avoid the risk of strangulation and/or asphyxiation (choking) caused by entanglement of the packaging around the child or external blocking of the respiratory tract through the child's nose or mouth!

ASSEMBLY AND FUNCTIONS

The stroller is supplied by the producer partially assembled. You do not need and tools to complete the assembly.

Please follow exactly the given instructions in the text and figures. Fixing in position is in most cases accompanied by a sound “click”.

IMPORTANT! Always check if the connections are stable after every fixing and make sure you have followed the given instructions!

ATTENTION! WARNING: Keep your hands from entrapment when performing each step, especially when folding and unfolding the stroller!

ATTENTION! The stroller must be assembled only by an adult! Do not allow children under 3 years to be present during assembly or disassembly, in order to avoid injury resulting from their access to small or disassembled parts!

UNFOLDING THE STROLLER

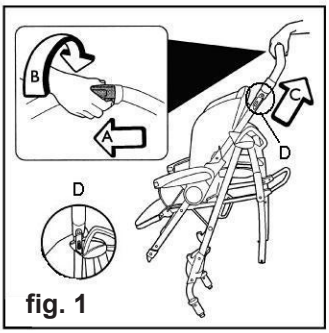

fig. 1

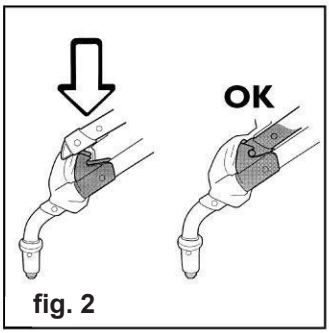

fig. 2

Remove the packaging and place the stroller in an upright position with the handles upwards as shown in **fig.1**. Unfolding can be done with one hand only in the following sequence: release the safety hooks **(fig. 1d)**, push the button **(fig. 1a)**, which is located in the center of the handle, turn the mechanism in the shown direction **(fig. 1b)** and lift the handle upwards **(fig. 1c)**. The stroller will unfold automatically unfold.

The lower ends of the handles tubes are fixed in the stopper as shown in **fig.2**. Make sure the stroller is fixed in an unfolded position by checking the position of the tubes relative to the stoppers.

FRONT AND BACK WHEELS

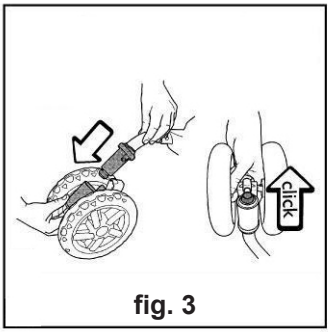

fig. 3

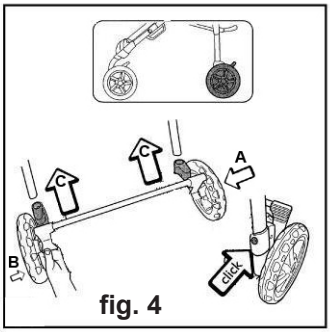

fig. 4

In order to assemble each of the front wheels, place the wheel with pressure to the front tubes of the stroller, as shown in **fig.3**, until it locks. You must hear a click. Make sure the wheels are well fixed.

Mount each of the back wheels to the tube which connects them in the direction shown in **fig. 4a** and **fig. 4b**.

Mount with pressure the connected back wheels to the back tubes of the stroller as shown in **fig.4c**, until you hear a click and the buttons located in the inner side of the tubes pop up though the openings of the plastic part of the wheel.

FRONT WHEELS SWIVEL FUNCTION

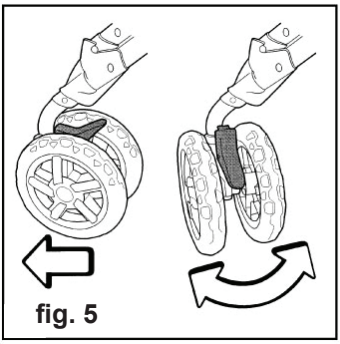
fig. 5

The front wheels can move in straightforward direction or in swivel mode (360°).

When you push down the levers, the wheels will freely turn at 360° **(fig.5)**. When you lift the levers up, the wheels will move in straight direction.

ATTENTION! When you use the stroller on uneven surfaces, fix the front wheels in position for straight direction! For even surfaces use the swivel function of the front wheels. These options allow for easier movement and the wheels will not wear out or damage quickly.

BACK WHEELS BRAKES

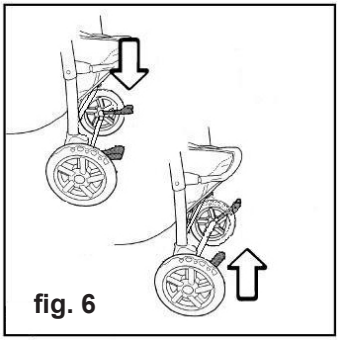

fig. 6

The stroller is equipped with comfortable brake system, which brakes both back wheels simultaneously. To engage the brakes, push the brake pedal on one of the two wheels. To release the brake, lift one of the pedals up. **(fig. 6)**.

ATTENTION! You must always engage the brakes, when you put your child in the stroller or you take it out, and also when you park the stroller, fold it or make adjustments.

STORAGE BASKET

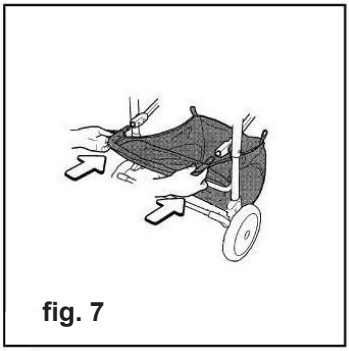

fig. 7

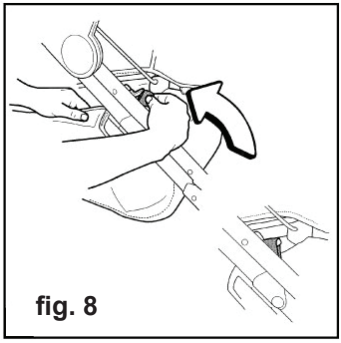

fig. 8

To assemble the storage basket, mount with pressure the tube located at the back end of the basket to the tubes of the stroller, which are near to the back wheels until you hear a click **(fig.7)**.

You must place the front openings of the storage basket above the side hooks, located in both front tubes beneath **(fig. 8)**. The basket is assembled and ready to use.

FRONT BUMPER

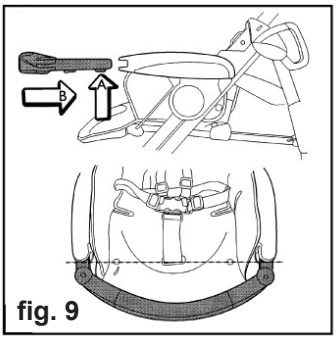

fig. 9

Mechanisms are situated at the both ends of the front bumper. There are two buttons on their downsides **(fig.9a)**. They are used to fix the front bumper to the arm rests of the stroller.

To fix the front bumper to the arm rests, push the buttons and insert the ends of the front bumper in the arm rests openings with light pressure until you hear a click **(fig. 9b)**.

To put the child in the stroller you can fully remove the front bumper or remove it only from one end, by pushing the buttons located on the downside of the front bumper. When the front bumper is fixed only from one side, the fixing mechanisms allow it to move left or right.

CANOPY

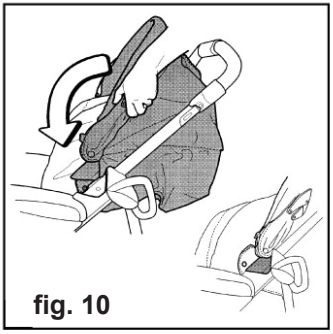
fig. 10

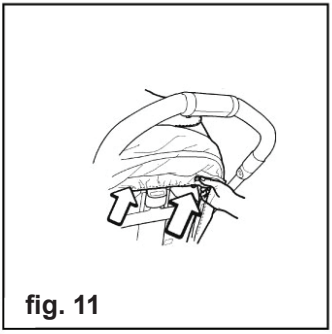
fig. 11

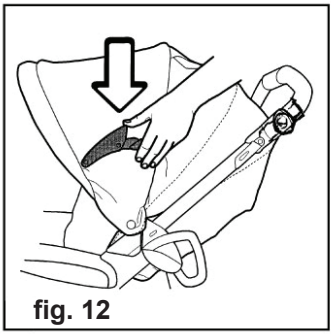
fig. 12

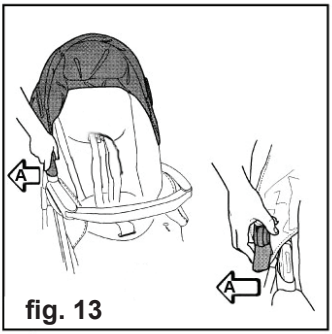

fig. 13

The canopy is installed on the tubes of the handle.

Fix the mechanisms with a slight push, until you hear Click **(fig. 10)**.

Button the canopy to the backrest as shown in **fig. 11**.

To unfold the canopy, push down the two levers on the side of the canopy **(fig.12)**.

The canopy can bend following the position of the backrest.

To remove the canopy, unbutton it from the back rest and pull the fixing mechanisms outwards as shown in **fig.13a**.

The construction of the stroller allows two ways to canopy's assembly according to the baby's position – face to face with the parent or facing the motion direction.

fig. 14

fig. 15

fig. 16

To mount the canopy when the child is facing forward, you must set the mechanisms in position as shown on **fig.14**.

To mount the canopy when the child is facing the parent, you must set the mechanisms in the position as shown in **fig.15**.

Button the canopy as shown in **fig.16** according to the way it is assembled.

TRANSFORMING THE SEAT INTO LYING POSITION OF THE CHILD (COT)
SETTING THE CHILD WITH ITS BACK TO THE DIRECTION OF MOVEMENT

fig. 17

fig. 18

fig. 19

The seat transforms into a cot for newborns **(fig.17)** and the child may be with its back to the direction of movement.

Open the zipper on the fabric from the side of the handles **(fig.18)**. Throw it over crossing the front bumper and tackle it via zip to the foot rest's fabric **(fig. 19)**.

BACKREST POSITIONS

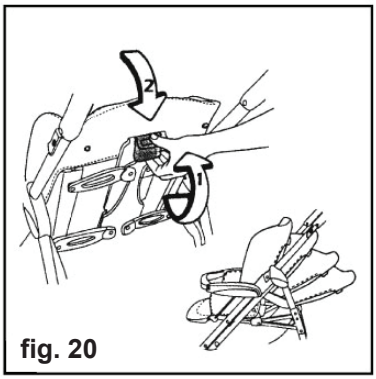

fig. 20

There are 4 reclining back positions. To adjust the back position, lift up and hold the plastic holder perpendicularly to the back **(fig. 20)**. Then lower the backrest and adjust it in the required position **(fig. 21)**. To adjust the backrest in an upper position, you must push it upwards with your hand until you reach the desired position. You must hear a click.

PLACING AND ADJUSTING THE SAFETY HARNESSES

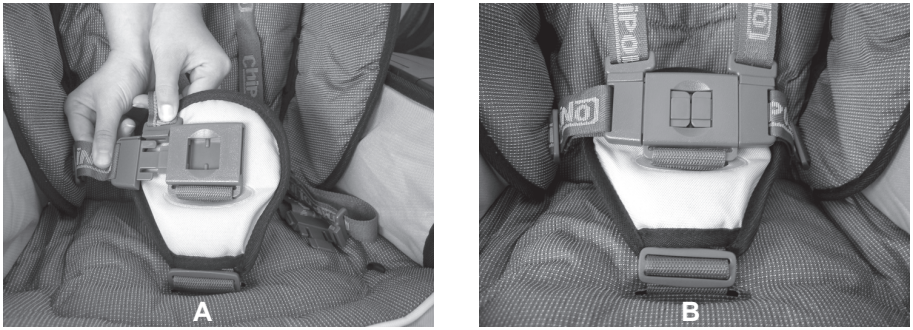

fig. 21

Join the clasps of the shoulder and waist harnesses as shown in **fig.21a**. Make sure that the harnesses are not twisted and fit the child well. If their length needs to be adjusted, use the regulating rings/clips. Fix the joined clasps in the uniting buckle **fig.21b**.

To unbuckle the harness, push the two buttons in the centre of the buckle and pull them out.

ATTENTION! You must always use the safety harnesses when the child is in stroller, even for a short time and the child must be looked after.

FOOT REST

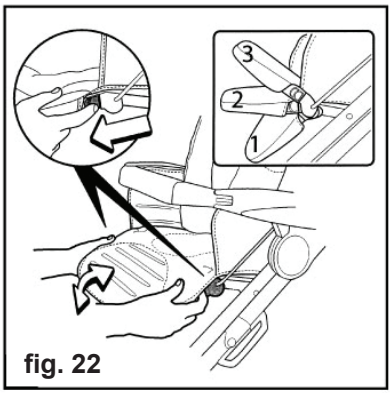

fig. 22

The footrest has 3 positions. To move it down, pull simultaneously the two side levers and set the foot rest in the desired position **(fig.22)**. When you want to move the foot rest up, it is sufficient to pull it upwards. When fixing each position you will hear a click.

FOLDING THE STROLLER

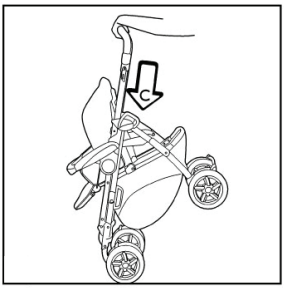
fig. 23

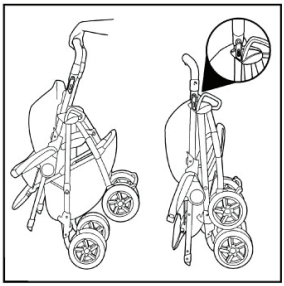
fig. 24

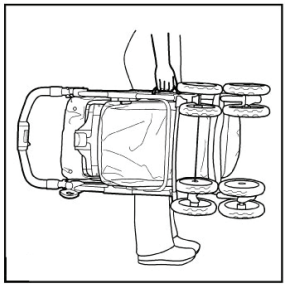
fig. 25

Before folding the stroller, fold the canopy by lifting the levers up. Set the back rest in sitting (most upright) position. Lift up the levers of front wheels to set them for straightforward motion. Folding can be done with one hand only in the following sequence: push the button located in the center of the handle, turn the mechanism in the direction shown and push the handle down **(fig.23)**. The stroller will fold automatically.

Fold the side protection hooks to fix the stroller in folded position.

When folded the stroller can stand upright and be stored in this position **(fig. 24)**.

The folded stroller can be easily moved by using the front wheels or by carrying it using the side handle as shown in **fig.29**.

To fold the stroller pull up the two levers on the handles to release the locking mechanisms **(fig.2)**. Push the handles slightly down – the two sets of tubes (the front tubes and the tubes with the handles) must separate as shown in **fig. 27**.

Pull up the mechanism handle as shown in **fig.27**.

When the stroller is folded it can stay upright and you can store it in this position.

The folded stroller can be easily moved by using the front wheels or by carrying it using the side handle as shown in **fig.25**.

ADDITIONAL ACCESSORIES

fig. 26

fig. 27

The set includes mama bag and foot cover. The foot cover is used by hooking its two ends to the stroller fabric **(fig.26)**. The foot cover length can be reduced as shown in **fig.27**.

MOUNTING CAR SEAT TO THE FRAME OF STROLLER POOKY

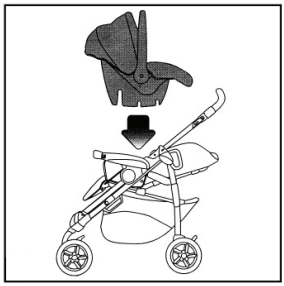

fig. 28

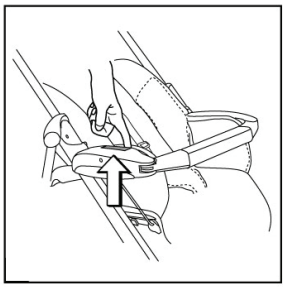

fig. 29

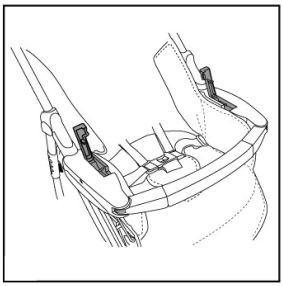

fig. 30

The main construction of the stroller allows the opportunity to install a car seat on it **(fig. 28)**. You must always engage the brakes before you install or remove the seat from the stroller frame.

Pull up the two plastic covers on the armrests as shown in **(fig.29)**.

Open the plastic covers on both sides as shown in **(fig. 30)**.

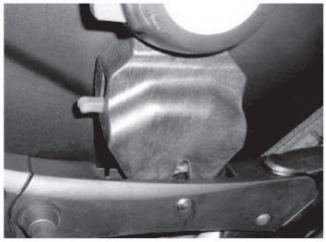

fig. 31

fig. 32

fig. 33

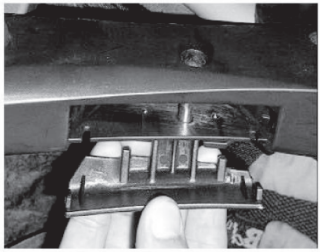

fig. 34

Push the adaptors to the openings of the two armrests **(fig.31)**. Lift up and push the red buttons until the car seat is fixed and you hear a click **(fig.32)**.

To remove the car seat from the stroller frame, push the red button and pull the adaptors **(fig.33)**. After you remove the car seat, place the plastic covers **(fig.34)**.

CARE AND MAINTENANCE GUIDELINES

1. Regularly check all locking mechanisms, brakes, safety harnesses and buckles, joints and fixing mechanisms to make sure that they function properly and are not damaged or worn out.

2. Should you find loose, torn or damaged parts, they need to be repaired or replaced.

3. Brakes and wheels wear out faster than other parts. Replace them when necessary.

4. Regularly oil the driving mechanisms. Renew the rivets when necessary. It is recommendable to use silicone oil or silicone spray for oiling.

5. Dirty metal or plastic parts impede the normal function of your stroller. Clean your stroller regularly and after that oil it.

6. Clean the fabrics, plastic parts and metal parts of the stroller with damp cotton cloth or sponge and water or mild soap. The fabric (except the canopy) can be removed and handwashed at 30°C. Do not machine wash. The fabric can be easily removed by means of zippers and buttons.

7. Do not use abrasive, bleach, ammonia, spirit or other aggressive detergents.

8. After cleaning always leave the stroller to fully dry and after that use it or store it.

9. Always store your stroller indoors. The effect of the environment – sea air, road covered with salt, acid rains, etc., as well as storing in the open air lead to corrosion.

10. Do not store your stroller in wet environment. In case you stroller has been stored in wet environment, you must first unfold it, wipe it with a dry cloth and leave it to dry out. Mold may appear on your stroller if it was stored wet.

11. Heavy sun exposure makes the plastic parts wear out faster and the fabrics fade out.

12. Do not put other items on the stroller when you store it regardless of whether it is folded or not, because you may damage it.

13. In case of problems with the normal use of the stroller, please contact the authorized repair service for advice or repair.

14. A full check from the technician is recommended if you have stored the stroller for a long period of time or want to use it for another child.

Fabric content:
Outer: 100% polyester
Filling: 100% polyester

1 Golyamo konarsko shosse Str., Plovdiv, BULGARIA
ww.chipolino.com